
STARLINK V5

WITH ROUTER MINI


Install guide

STARLINK

Kit content
What's in the box

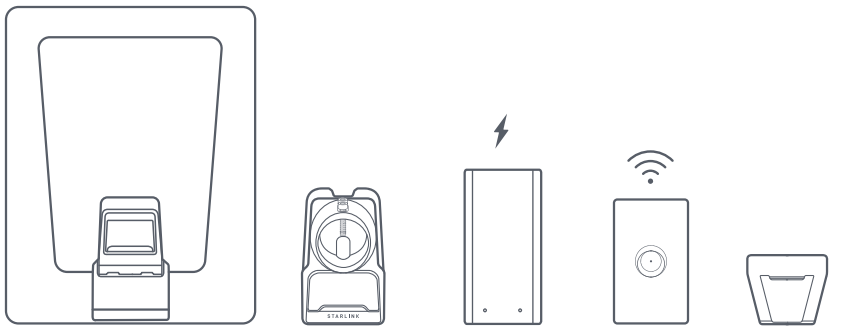

Starlink V5 | Pipe Adapter | Power Supply | Router Mini | Router Mini Stand



Ⓐ Starlink Cable
15 m (49.2 ft)

Ⓑ Starlink Ethernet Cable
2 m (6.6 ft)

Ⓒ Power Cable
1.5 m (4.9 ft)


Getting started
Install app


Download Starlink app

Scan the QR code to download the Starlink app.



setup.starlink.com

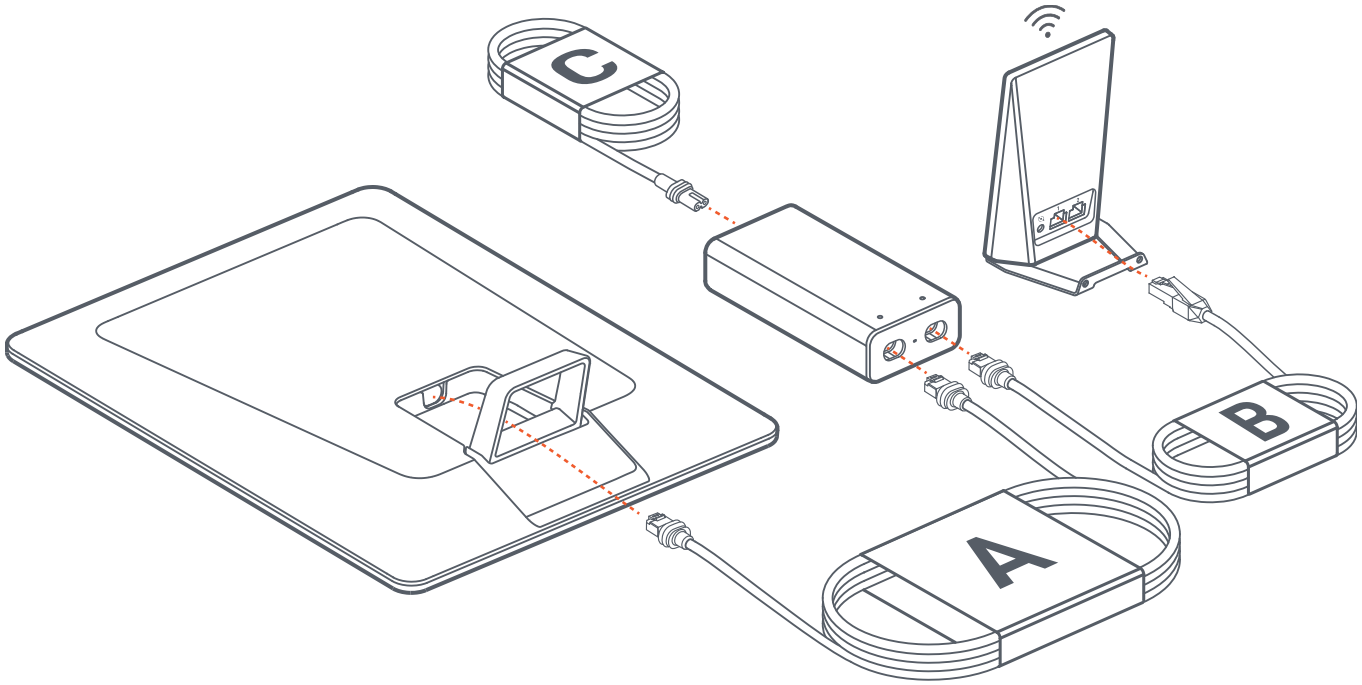


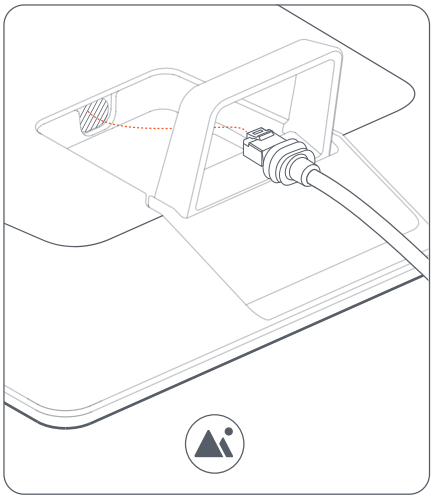

Install Starlink Cable

Lift the kickstand and plug one end of the provided Starlink Cable into your Starlink with the cable locking feature facing up. Ensure the plug is fully inserted such that the plug face is flush with the surface.


To remove the cable, pull firmly outwards as there is no release tab.

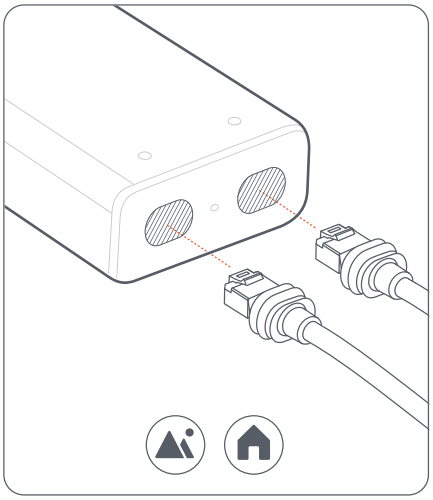

Plug cables into Power Supply

Plug the other end of your Starlink Cable into the Power Supply. Ensure the plug is fully inserted such that the plug face is flush with the surface.

Plug the Ethernet cable with water-sealing feature into the Power Supply. Ensure the plug is fully inserted such that the plug face is level with the surface.

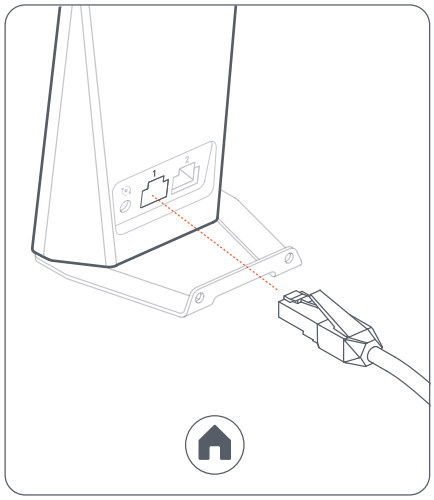

Plug in router


Plug the other end of the Ethernet cable into the port on the Router Mini. The latching feature will click into place when fully inserted.

Push down on the latching mechanism and pull outwards to remove the cable.

1

Remove kickstand


Remove the kickstand by pulling on the release tab.

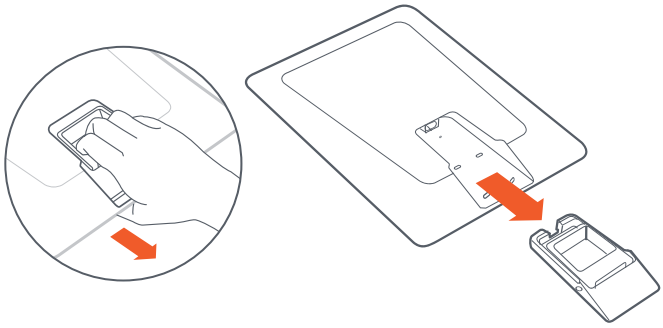

2

Remove hex key

Pull upwards on the hex key to remove it from the storage location on the Pipe Adapter.

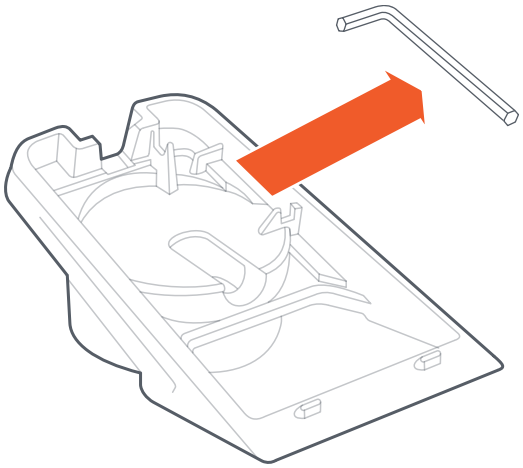


3

Route cable

For routing the cable on the outside of your mounting pipe, pass one end of the Starlink Cable through the opening in the Pipe Adapter.

If the Starlink Cable is being routed inside the mounting pipe, first route the cable through the mounting pipe, then pass through the opening above the cylindrical part of the Pipe Adapter.

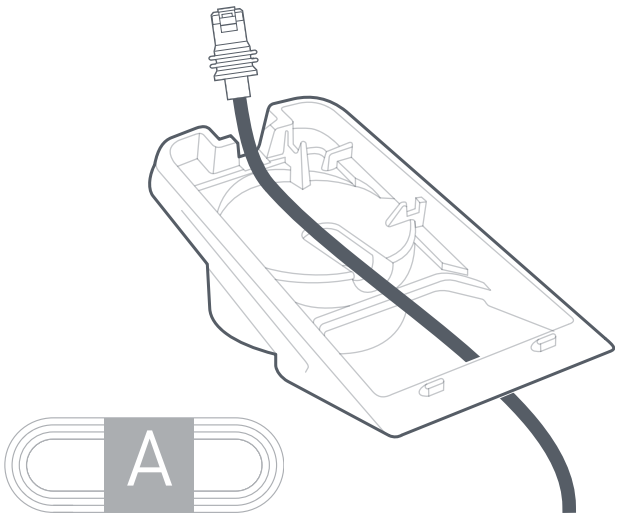


4

Install cable and Pipe Adapter

Plug the connector of the Starlink Cable into your Starlink with the cable locking feature facing up. Ensure the plug is fully inserted such that the plug face is flush with the surface.

Next, install the Pipe Adapter into the Starlink by sliding it in until it clicks into place.

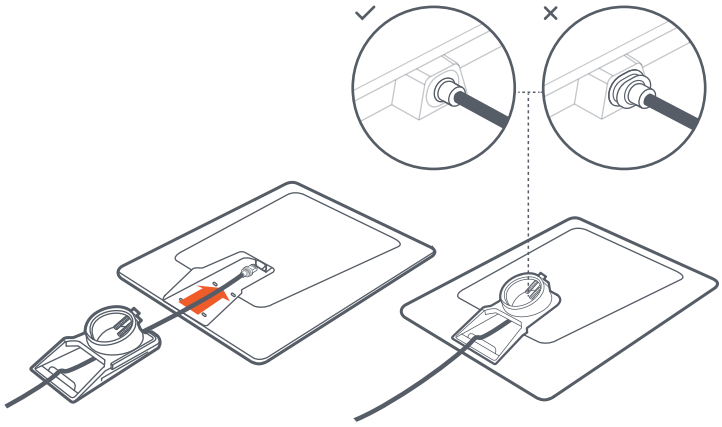


5

Install onto mounting pipe

Loosen the two securing bolts so that the mounting pipe has sufficient clearance to fit into the Pipe Adapter. Then, slide the Pipe Adapter onto your mounting pipe. Temporarily tighten down the securing bolts once the Pipe Adapter is fully seated on the mounting pipe.

Ensure all the cables are properly installed, then plug in the Power Cable to turn on your Starlink.

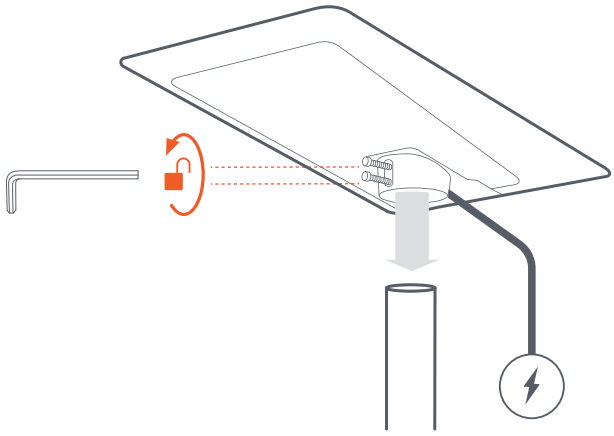


6

Adjust alignment and tighten bolts

Use the Starlink app to step through the set-up flow and get online. Once online, the Starlink app will alert you if any adjustments are needed to the orientation of your Starlink. Rotate your Starlink as needed to match the alignment shown in the Starlink app.

Next, use the hex key to tighten the securing bolts to lock your Starlink in place.

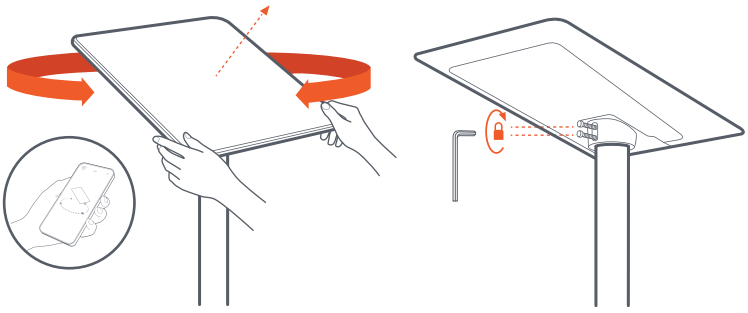

Installation conditions

⚠ **CAUTION!** If you are uncomfortable with any part of the installation process, do not attempt it – contact a professional to install your Starlink. Starlink is not responsible for injury or damage to property caused by the installation process.

Kit installation for use on moving vehicles.

⚠ **CAUTION!** Take extra care if installing a Starlink to be used on a moving vehicle or vessel. Ensure that the mount is installed firmly on a structurally sound, horizontal surface away from other equipment to give your Starlink a clear view of the sky. Equipment falling off the vehicle due to poor installation practices can cause serious accidents resulting in bodily injury. Do not mount the Starlink on any vehicle or vessel if the mount structure is not stable, or if it cannot be properly secured as described in this guide. Ensure the installation on the vehicle or vessel is compliant with local Department of Transportation or maritime regulations.

⚠ **CAUTION!** Mounts are not designed for high winds, hurricane or tornado wind loads. Tethering should be used in all cases to prevent failure in an unexpected wind event. See installation instructions before connecting this equipment to the input supply.

⚠ **CAUTION!** To avoid personal injury and/or damage to the property when drilling, take caution and follow basic safety procedures, including:

- Wear appropriate eye, hand and face protection.
- Avoid studs, electrical wiring and water lines when drilling. Drilling into any of these can lead to fire, shock, injury or death.
- Drill at a slight downward angle from the home interior to the home exterior and thoroughly apply sealant. Improper drilling and sealing may lead to water and/or bug intrusion and/or damage.